

Operating Equipment in Enhanced Classroom – 2C10/14

Use the Black Remote (labeled PROJECTOR) to operate the projector and to select the components you wish to project

To **Turn on the Projector**: press the RED button (top right corner of the projector remote)

To **Project the Computer**: press MY BUTTON 1 on Projector Remote and switch the tan box to A/Computer.

To **Project a Laptop**: plug the VGA cable into the laptop. Press MY BUTTON 1 on Projector Remote and switch the tan box to B/Laptop.

To **Project the Document Presenter**, press MY BUTTON 2 on the Projector Remote.

Turn on the document presenter by pressing the power button on the document presenter. (Red=off/Blue=on).

To **project a DVD**, Use the CD drive in the computer

Volume Control:

Adjust the volume by using the MASTER VOLUME CONTROL knob on the amplifier located on the left upper shelf of this desk.

When Finished:

Turn off the projector by pressing the RED button (TWO times) on the projector remote.

Turn off the document presenter.

You may leave the computer and monitor on.

