

Operating Equipment in Enhanced Classroom

Use the Black Remote (labeled PROJECTOR) to operate the projector and to select the components you wish to project

To **Turn on the Projector**: press the RED button (top right corner of the projector remote)

To **Project the Computer**: press MY BUTTON 1 on Projector Remote.

To **Project a Laptop**: plug the HDMI cable into the laptop and press MY BUTTON 2 on Projector Remote.

To **Project the Document Presenter**, press DOC CAMERA on the Projector Remote.

Turn on the document presenter by pressing the power button on the document presenter.

To **project a DVD**, Use the CD/DVD drive in the computer.

Volume Control:

Adjust the volume by using the MASTER VOLUME CONTROL knob on the amplifier located in the shelving area of this desk.

When Finished:

Turn off the projector by pressing the RED button (**TWO times**) on the projector remote.

Turn off the document presenter.

