

Operating Equipment in Enhanced Classroom

Use the White Remote (labeled PROJECTOR) to operate the projector and to select the components you wish to project.
Aim the remote towards the projector when making selections.

To **Turn on the Projector**: press the ORANGE button (top left corner of the projector remote).

To **Project the Computer**: press the button labeled COMPUTER on the Projector Remote.

To **Project a Laptop**: plug the VGA cable into the laptop and press the button labeled DOC CAM/LAPTOP on the Projector Remote. If the document presenter displays, press the same button again.

To **Project the Document Presenter**, press DOC CAM/LAPTOP on the Projector Remote. If the laptop displays, press the same button again.
Turn on the document presenter by pressing the power button on the document presenter.

To **project a DVD**, use the CD/DVD drive in the computer.

Volume Control:

Adjust the volume by using the MASTER VOLUME CONTROL knob on the amplifier located in the shelving area of this desk.

When Finished:

Turn off the projector by pressing the ORANGE button (TWO times) on the projector remote.
Turn off the document presenter.

