

Operating Equipment in Enhanced Classroom

Use the Black Remote (labeled PROJECTOR) to operate the projector and to select the components you wish to project

To **Turn on the Projector**: press the RED button (top right corner of the projector remote)

To **Project the Computer**: press MY BUTTON 1 on Projector Remote.

To **Project the Document Presenter**, press DOC CAMERA or MY BUTTON 2 on the Projector Remote.
Turn on the document presenter by pressing the power button on the document presenter.

To **project a DVD**, Use the CD/DVD drive in the computer.

Volume Control:

Adjust the volume by using the volume knob on the speakers located on the desk.

When Finished:

Turn off the projector by pressing the RED button (TWO times) on the projector remote.
Turn off the document presenter.

