

Operating Equipment in Enhanced Classrooms – 3F02

Use the Projector Remote (Sharp) to operate the projector and to select the components you wish to project. The four components are computer, DVD, VCR and document presenter.

Turn on Projector:

Press the “On” button on the Projector Remote.

Select the desired component to project:

To project the Computer, press INPUT 1 on the Projector Remote.

Turn the computer and the computer monitor on if necessary by pressing their power buttons and operate the computer and you normally would.

To project the document presenter, press INPUT 2 on the Projector Remote. Turn on the document presenter by pressing its Power button.

To project the DVD, press INPUT 3 on the Projector Remote. Operate the DVD as you normally would.

To project the VCR, press INPUT 3 on the Projector Remote. Operate the VCR as you normally would.

Volume Control:

Adjust the volume by using the MASTER VOLUME CONTROL knob on the Amplifier.

When Finished:

Turn off the projector by pressing Standby on the Projector Remote.

Turn off the document presenter.

Turn off the computer monitor. You may leave the computer on.