# **Operating Equipment in Enhanced Classrooms**

Use the touch-screen control panel to operate the projector and to select the components you wish to project. The components are computer, laptop, and document presenter.

# **Projector Power:**

Power on the projector by pressing Projector ON

# Select the desired component to project:

To <u>project the Computer</u>, touch COMPUTER. Turn the computer and the computer monitor on if necessary by pressing their power buttons and operate the computer as you normally would.

To <u>project a Laptop</u>, touch COMPUTER. Connect the laptop to the cable labeled laptop and operate the laptop as you normally would.

To play a DVD, touch COMPUTER and use the computer DVD drive.

To <u>project the document presenter</u>, touch DOC CAM. Turn on the document presenter by pressing its Power button.

### **Volume Control:**

Use the knob labeled audio control – located in the cabinet below.

### When Finished:

Turn off the projector by pressing Projector Off. Turn off the document presenter.